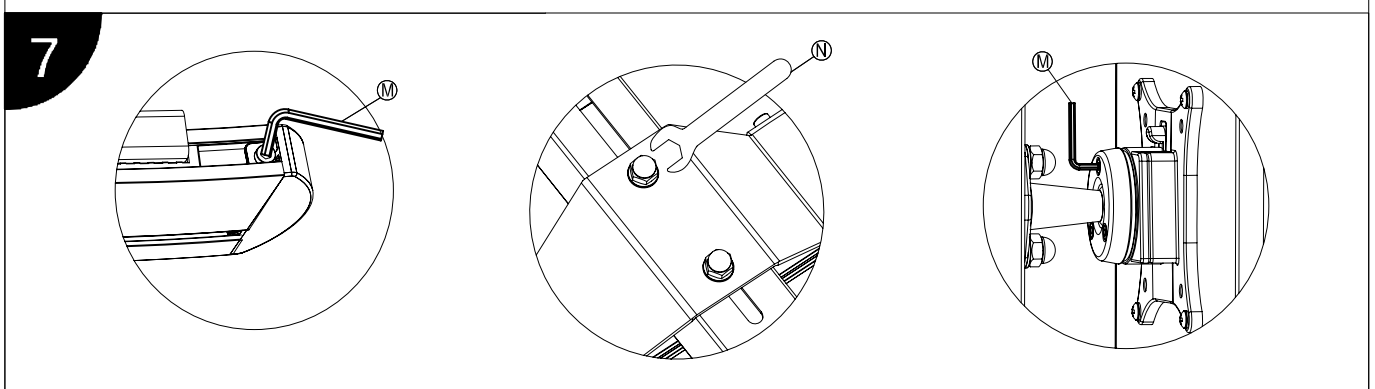
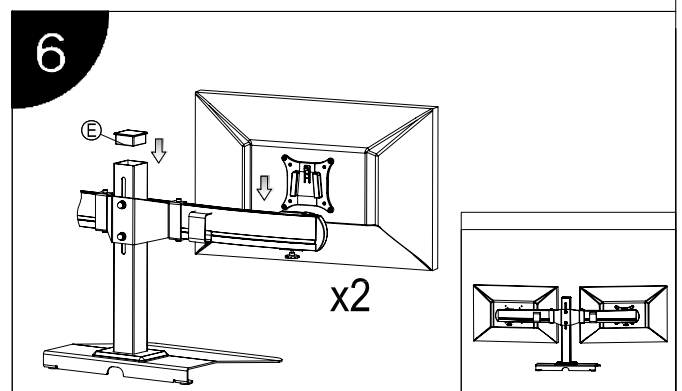
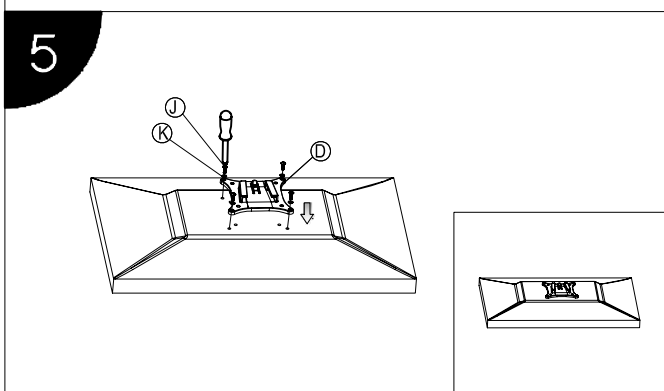
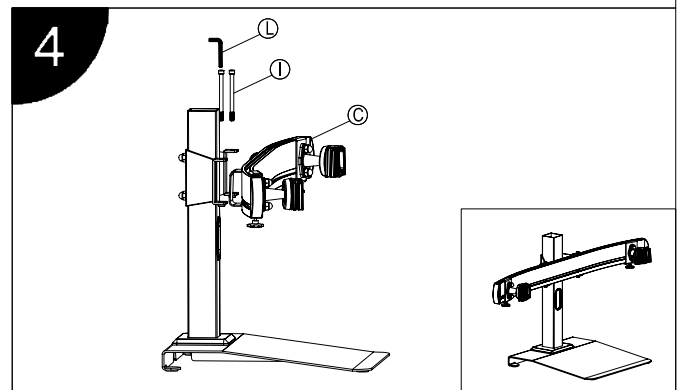
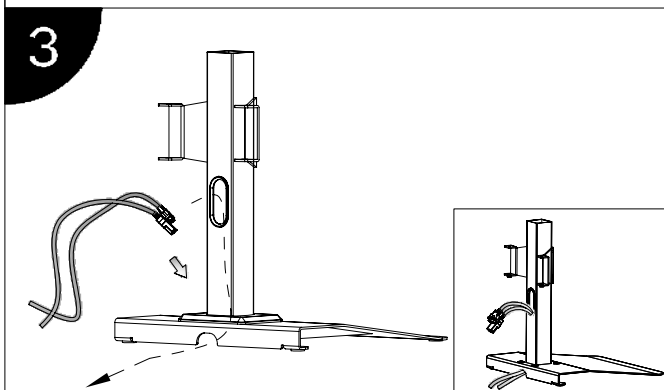
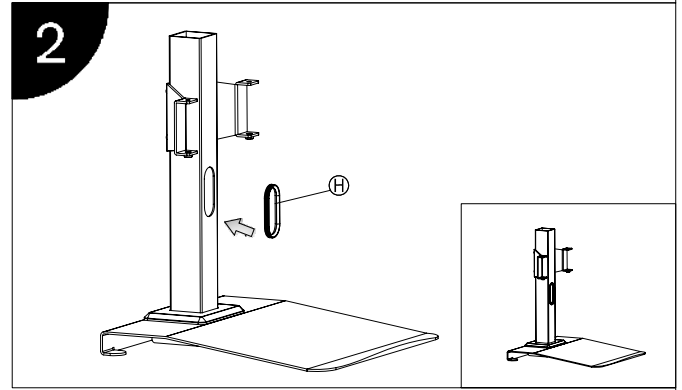
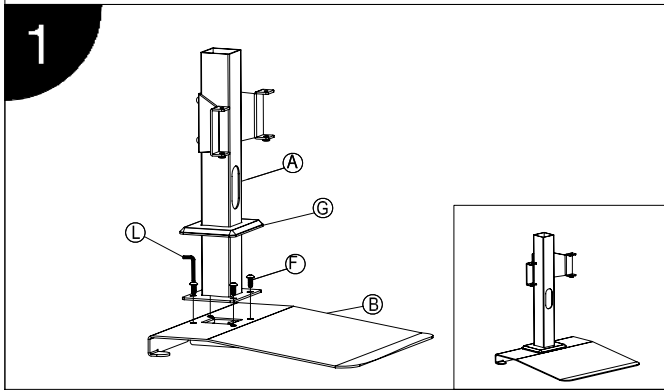


## Installation Manual

 

 

 
 
 

 





Model No.: BL204

### Installation Steps



## Installation Manual

Model No.: BL204

Parts list			
No.	ITEM	SPECS	QUANTITY
A			1
B			1
C			1
D			2
E			1
F		M8*20	4
G			1
H			1
I		M6*80	2
J		M4*12	8
K		M4	8
L		M5	1
M		M3	1
N		M8	1